


TOOLS REQUIRED

#2 Screwdriver or 5/16" Nut driver

INSTALLATION

1. Mount the panel to the raised bosses on the cabinet rear panel using four 10-32 x 5/16" hex head screws. Install two screws at any of the four holes on each side.
2. Mount up to four 89D Brackets (not included) using two 10-32 x 1/2 hex head screws.
3. The cable spools can be mounted along the top and bottom edges of the panel using 10-32 x 1/2 hex head screws.

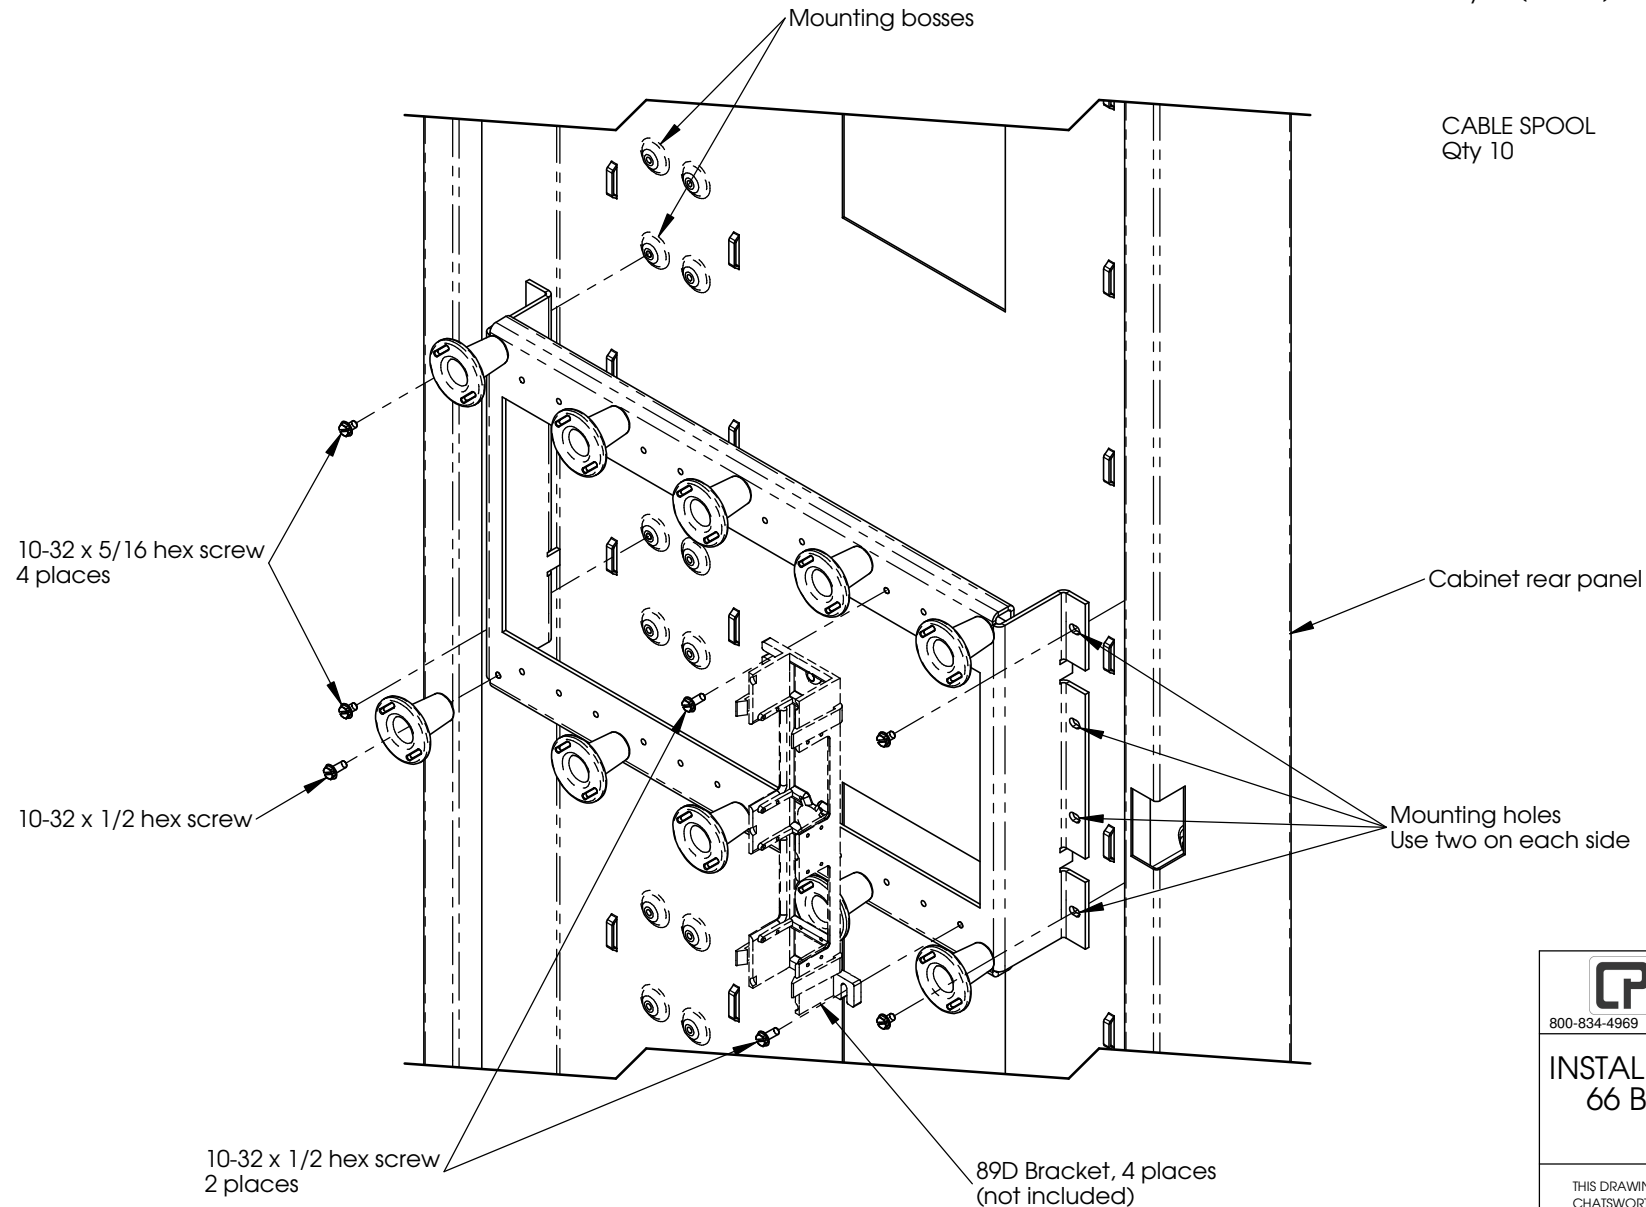

PARTS INCLUDED

SHEET 1

66 BLOCK TERMINATION PANEL
QTY 1


10-32 X 5/16 Hex head screw
Qty 5 (1 extra)




10-32 X 1/2 Hex head screw
Qty 19 (1 extra)



CABLE SPOOL
Qty 10

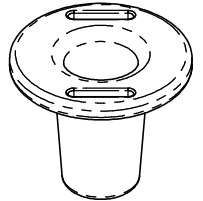

 CHATSWORTH PRODUCTS, INC.
800-834-4969 techsupport@chatsworth.com www.chatsworth.com

**INSTALLATION INSTRUCTIONS,
66 BLOCK TERMINATION
PANEL, CUBE IT**

THIS DRAWING CONTAINS INFORMATION PROPRIETARY TO CHATSWORTH PRODUCTS, INC. ANY REPRODUCTION DISCLOSURE OR USE OF THIS DRAWING IS EXPRESSLY FORBIDDEN EXCEPT AS AGREED TO IN WRITING BY CHATSWORTH PRODUCTS, INC.