

TOOLS REQUIRED

#2 Screwdriver or 5/16" Nut driver

INSTALLATION

1. Mount the panel to the raised bosses on the cabinet rear panel using four 10-32 x 5/16" hex head screws. Install two screws at any of the four holes on each side.
2. Mount up to six 110 pair 110 Blocks (not included) using two 10-32 x 1/2 hex head screws.

PARTS INCLUDED


SHEET 1

110 BLOCK TERMINATION PANEL
QTY 1

10-32 X 5/16 Hex head screw
Qty 5 (1 extra)



10-32 X 1/2 Hex head screw
Qty 19 (7 extra)

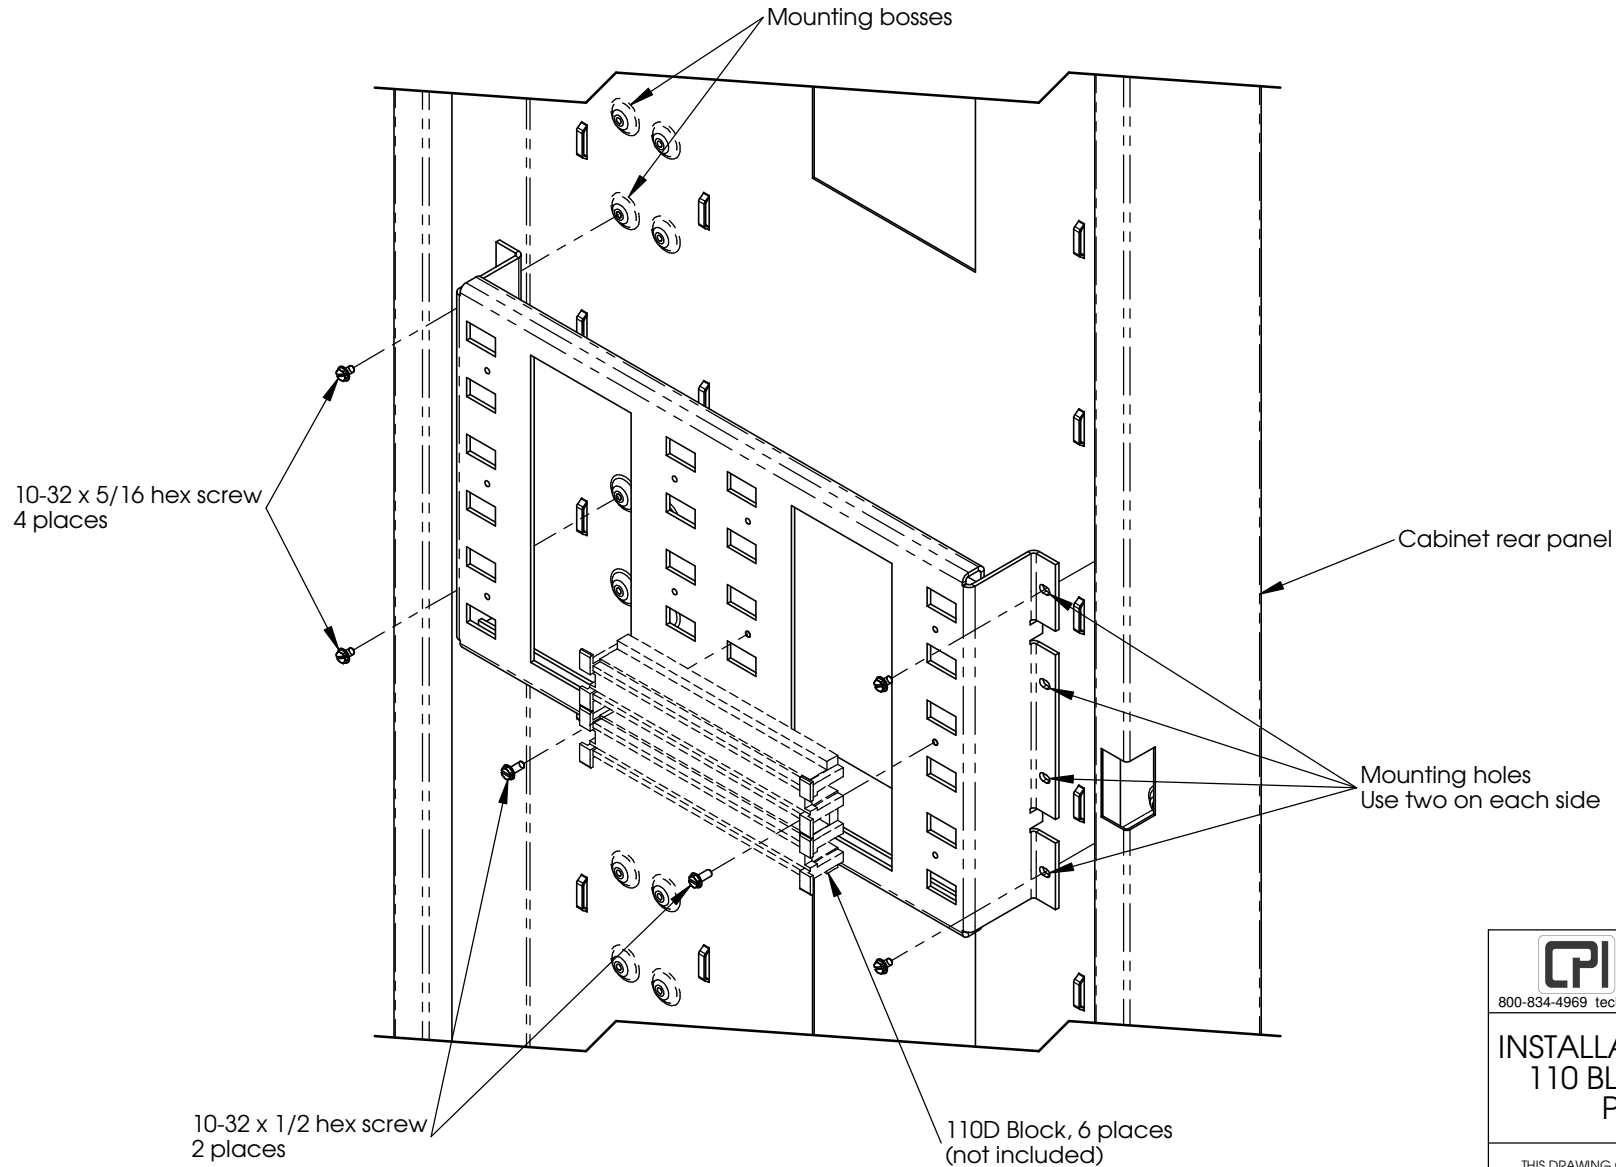

 CHATSWORTH PRODUCTS, INC.

800-834-4969 techsupport@chatsworth.com www.chatsworth.com

INSTALLATION INSTRUCTIONS, 110 BLOCK TERMINATION PANEL, CUBE IT

THIS DRAWING CONTAINS INFORMATION PROPRIETARY TO CHATSWORTH PRODUCTS, INC. ANY REPRODUCTION DISCLOSURE OR USE OF THIS DRAWING IS EXPRESSLY FORBIDDEN EXCEPT AS AGREED TO IN WRITING BY CHATSWORTH PRODUCTS, INC.