

LIEBERT® SN™ INTEGRATED SENSORS

Quick-Start Guide

Description

This guide provides installation instructions for the following Liebert SN **integrated sensor** models:



Integrated cable with:

- SN-Z01 - Single temperature probe 1 probe
- SN-Z02 - Three temperature probes 3 probes
- SN-Z03 - Three temperature probes plus single humidity probe 4 probes

Integrated sensors are attached to a single cable.

- Liebert SN sensors may be connected in a string, including a combination of modular and integrated sensors. **Modular sensors** are separate probes, each shipped with a cable—for example, to monitor door contacts, digital inputs or temperature (1 probe each) or both temperature and humidity (2 probes).
- The maximum string length is 65.6 ft. (20m), and the maximum number of probes is 10. The number of probes varies by the Liebert monitoring product; see the Liebert product user manual for details.

Liebert SN sensors may be placed in any area—for example, in a Knurr® rack—to monitor temperature and humidity levels.

What's Included

Liebert SN integrated sensors are shipped with the following components:

Description	Quantity for Model:			Description	Quantity for Model:		
	SN-Z01	SN-Z02	SN-Z03		SN-Z01	SN-Z02	SN-Z03
Number and Type of Sensors:				Dual Lock™ Fastener 0.5 ft. (0.15m)	1		
Temperature Sensors	1	3	3	Cable Tie	2	6	
Humidity Sensors	—	—	1	Alcohol Pad	1	3	
Number of Probes	1	3	4	Fastener 1/4 Turn High Pro	1	3	
Sensor Bracket - Base	1	3		Quick-Start Guide	1		
Sensor Bracket - Support	1	3					
Screw 8-32 x 7/16	2	6					

Installation

Follow these four steps to mount and connect sensors.

Step 1 Record the Sensor Address


During configuration, the Web interface will display the addresses of all connected sensors. You will need to be able to identify which address belongs to each sensor.

Be sure to make a note of each sensor's address before mounting and connecting sensors.

The sensor address can be found on the sensor itself (modular sensors) or the RJ45 end of the sensor cable (integrated sensors), shown in the examples at right.


MODULAR SENSOR

Address for one sensor:
1 temperature sensor (T)

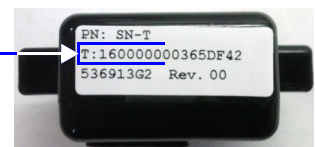

INTEGRATED SENSOR

Addresses for four sensors:
3 temperature (T1, T2, T3)
1 humidity (H2)

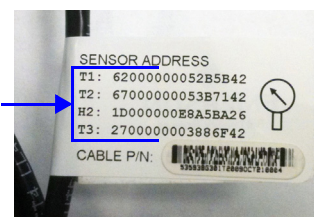

Step 2 Mount the Sensor

The sensor may be mounted in a Knurr rack or another type of rack. For temperature and humidity sensors, be sure to choose a place with unobstructed airflow—for example, on the rack door. Check to make sure that the sensor does not cover any vents that might impede airflow.


A factory-supplied bracket and several types of fasteners offer various options for rack mounting:

Use in:	Materials Needed	Factory-Supplied
• All mounting options: A - D	• Bracket base & sensor support	✓
• Option A - Mount on a Knurr Rack Frame 19-Inch Rail	• Quarter-turn tool-less fastener	✓
• Option B - Mount the Sensor on the Rack Door	• Screws (<i>Knurr Rack only</i>)	✓
	• Cable ties (<i>all types of racks</i>)	✓
• Option C - Mount the Sensor on a Flat Surface	• Dual Lock fasteners	✓
• Option D - Mount the Sensor on the Rack Rails	• Standard panhead rack screw	Not supplied

Assemble the Sensor and Bracket

If using the factory-supplied bracket, follow these steps to assemble the two parts of the bracket and attach the sensor to the bracket:

- The factory-supplied bracket has two parts—the support base and the sensor support, as shown at right. Insert the support base into one end of the sensor support.
- Snap the sensor into the other end of the sensor support.

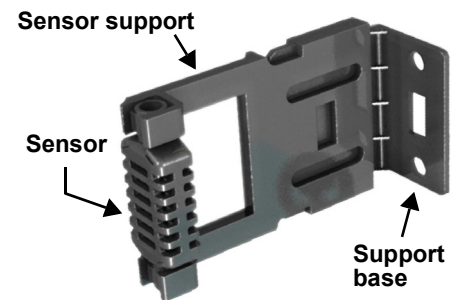

Choose a Rack Mounting Option


Determine where to place the sensor in the rack and use one of the following methods:

• Option A Mount on a Knurr Rack Frame 19-Inch Rail

To mount the sensor on the frame or optional 19-inch rail of a Knurr rack, use the factory-supplied quarter-turn, tool-less fastener to secure the sensor and bracket to the frame or rail (see **Figure A**).

- Place the sensor in the factory-supplied bracket (see **Assemble the Sensor and Bracket**).
- Insert the quarter-turn tool-less fastener through the slots in the sensor support or the base of the assembled bracket to mount the sensor on the rack frame or optional 19-inch rails.
- As the name signifies, the quarter-turn fastener requires only a 1/4 turn clockwise to fasten the sensor securely in place.

Figure A Sensor mounted on Knurr rack frame

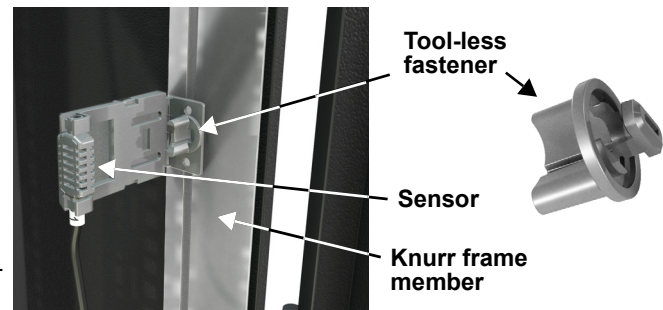


• Option B Mount the Sensor on the Rack Door

To mount the sensor on a rack door, use the factory-supplied screws (Knurr rack only) or cable ties (all types of racks) to secure the sensor and bracket to the door (see **Figure B**).

- Place the sensor in the factory-supplied bracket (see **Assemble the Sensor and Bracket**).
- *For Knurr racks:*
 - Use the factory-supplied screws or cable ties to mount the sensor and bracket on the rack door.

If the door has a slot similar to the one on the Knurr rack frame member (see **Option A**), you can attach the sensor support bracket by inserting the quarter-turn tool-less fastener through the center slot in the bracket.
- *For other types of racks:*
 - Use the factory-supplied cable ties to mount the sensor and bracket on the rack door. (The bracket is not necessary if the sensor is mounted on the door's perforated holes using cable ties.)

Figure B Sensor mounted on rack door

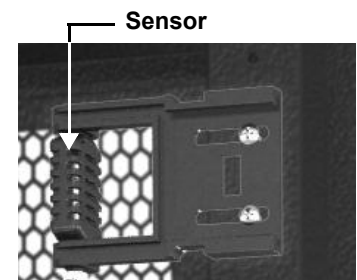

- **Option C Mount the Sensor on a Flat Surface**

To mount the sensor on a flat surface in any rack:

- Place the sensor in the factory-supplied bracket (see **Assemble the Sensor and Bracket**).
- Use the provided alcohol pads to clean the rack surface and bracket prior to affixing the factory-supplied Dual Lock fasteners.
- Use the Dual Lock fasteners to affix the sensor and bracket to any flat surface in the rack or on the door.

- **Option D Mount the Sensor on the Rack Rails**

To mount the sensor on the rails of any rack:


- Place the sensor in the factory-supplied bracket (see **Assemble the Sensor and Bracket**).
- Use the factory-supplied bracket and a standard panhead rack screw (not supplied) to mount the bracket on the rack rails.

Step 3 Connect the Sensor


Each sensor is shipped with a cable to connect to the Liebert SN sensor port on your Liebert product. You may use this cable or another standard straight-through cable to connect to the Liebert monitoring device or to another modular or integrated sensor.

To connect a sensor or string of sensors to a Liebert product:

- After securely mounting the sensor (**Step 2**), look for the sensor icon on the Liebert product to identify the Liebert SN sensor port.

Icon	Description	Purpose
	Liebert SN sensor port	Use this port ONLY to plug in optional sensor accessories.

- Insert the RJ45 connector end of the sensor cable into the Liebert SN sensor port on the Liebert product. Some examples are shown below.
- If using multiple sensors, connect them in a string using the factory-supplied cables or other straight-through cables. See the user manual for your Liebert product to determine the maximum number of sensors that may be connected on a string.

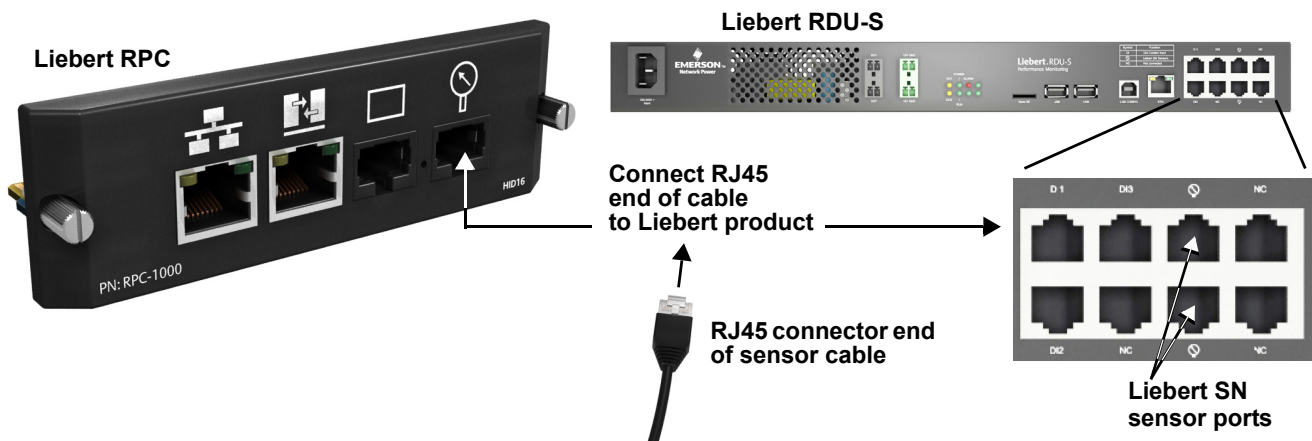

Step 4 Configure the Sensor

Use the Web interface to acknowledge the connection and configure sensor parameters. You will need the sensor address recorded in **Step 1** during configuration. Examples of parameters to be configured include:

- Assign a label to each sensor.
- Configure temperature or humidity thresholds or other parameters to trigger warnings and alarms.

Refer to the user manual of your Liebert product for detailed configuration instructions.

Specifications

Dimensions - W x D x H, in. (mm)	2 x 3/4 x 1-5/8 (51 x 19 x 41)
Weight, lb. (kg)	
Net Weight	0.25 (0.11)
Shipping Weight	0.44 (0.2)
Temperature (all models), °F (°C)	
Ambient Operating Environment	41 to 131 (5 to 55)
Temperature Sensor Range	41 to 131 (5 to 55)
Accuracy	±1.1 (±0.5)
Humidity (SN-Z03 models)	
Humidity	10 to 95% RH (non-condensing)
Accuracy	±3.5% RH
Altitude, ft. (m)	Up to 6,500 (2000)

User Manuals

This guide is designed to provide the information needed to install a Liebert SN modular sensor in a Liebert product. For complete details on installing and configuring the sensor with your Liebert product, consult the user manual for your Liebert product, available online at www.liebert.com.

Emerson Network Power highly recommends that new users consult the user manual.

Compatible Liebert Products

Liebert SN integrated sensors are compatible with many Liebert products. Some examples are:

- The Liebert MPX™ is an Adaptive Rack PDU (power distribution unit) built with modular and scalable components that can be installed and reconfigured on-site to meet varying input and output power connectivity needs. The Liebert RPC™ (Rack PDU Card) is an optional accessory for the Liebert MPX, but is required for connecting the Liebert SN.
- The Liebert MPH™ is a single unit with fixed capacity, input and output. The Liebert RPC is factory-installed in the Liebert MPH.
- The Liebert RDU-S is an Ethernet-ready, Web-enabled device designed to provide a consolidated view of your monitored environment. The Liebert RDU-S is capable of monitoring temperature, humidity, door status, digital inputs, digital outputs, cameras and more.

Liebert Corporation

1050 Dearborn Drive Telephone: 1-800-877-9222
P.O. Box 29186 Facsimile: 1-614-841-6022
Columbus, OH 43229 www.liebert.com



© 2010 Liebert Corporation
All rights reserved throughout the world. Specifications subject to change without notice.

® Liebert is a registered trademark of Liebert Corporation. All names referred to are trademarks or registered trademarks of their respective owners.

SL-20840_REV1_07-10